




	MODEL NUMBER: AA1000 Series Arm	Document Number: PD196-197R6
	Installation Instruction for PDI-AA1000 Series Arm	Page 1 of 7

	CAUTION		 This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.
	RISK OF ELECTRIC SHOCK, DO NOT OPEN!		
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL			

THIS INSTALLATION SHOULD BE MADE BY A QUALIFIED SERVICE PERSON AND SHOULD CONFORM TO ALL LOCAL CODES. READ AND FOLLOW THE SAFETY INSTRUCTIONS BEFORE ATTEMPTING THIS INSTALLATION.

NOTE to CATV system installer: This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.



WARNING: OXYGEN ENVIRONMENT DO NOT use in an oxygen tent or oxygen chamber. Such use may cause a fire hazard.



WARNING: To avoid the hazards of fire or electric shock, DO NOT expose this TV to rain or moisture.



DANGER: ARM RECOIL HAZARD The safety brake pin must remain in the SAFETY BRAKE PIN HOLE whenever the television set is removed from the arm or when the arm is removed from the wall bracket to prevent the arm from springing open.

Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus. Unplug this unit from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning. This unit **REQUIRES** periodic maintenance. Refer to the maintenance section for instructions.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat source such as radiators, heat registers, stove, or other apparatus (including amplifiers) that produce heat.
9. Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
10. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades



- with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prongs are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
11. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
12. Only use attachments/accessories specified by the manufacturer.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Contact PDi for complete list of approved TV model numbers for which this arm can be used.

	MODEL NUMBER: AA1000 Series Arm	Document Number: PD196-197R6
	Installation Instruction for PDI-AA1000 Series Arm	Page 2 of 7

Scope:

This document outlines how to install a PDI-AA1000 Series PDI arm into a PDI-180C wall bracket, and arm maintenance instructions.

Safety Steps:

- 1) Always wear safety glasses/goggles to prevent injury from debris.
- 2) Follow the installation/removal instructions for your existing products.


Tool List:

- 1) Safety glasses/goggles
- 2) P1 OR P2 Phillips screw driver
- 3) Medium size pair of needle nose pliers
- 4) 5/32 Hex key or hex bit and driver
- 5) pliers

Procedure:

Step 1:

Remove the PDIPFHMS103238 screw from the PD216-006 base pin cover and set aside for re-installing later.
Remove the PD216-006 base pin cover from the top of the wall bracket.
Remove the PDI-609 base pin from the wall bracket.

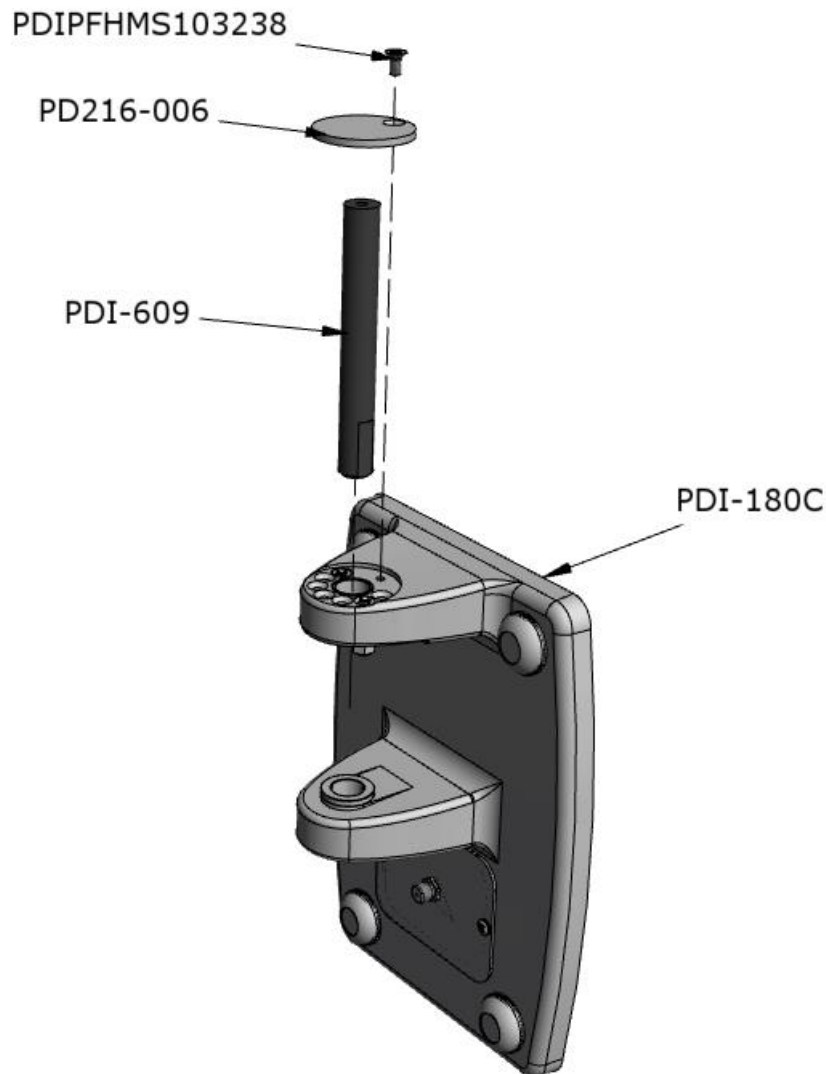

 PDi Communication Systems, Inc. <i>Better Solutions Are Within Reach®</i>	MODEL NUMBER: AA1000 Series Arm	Document Number: PD196-197R6
	Installation Instruction for PDI-AA1000 Series Arm	Page 3 of 7


Step 2:

Place the base of the arm into the clevis of the wall bracket and align the 5/8" holes of the arm base with the holes of the wall bracket bushings.

Insert the PDI-609 base pin (end with flats first) thru the top bushing the arm base and the lower bushing.

The flats on the base pin must be properly aligned with the Double "D" plate in the bottom of the base for proper installation.

This will be shown in more detail on the following page.

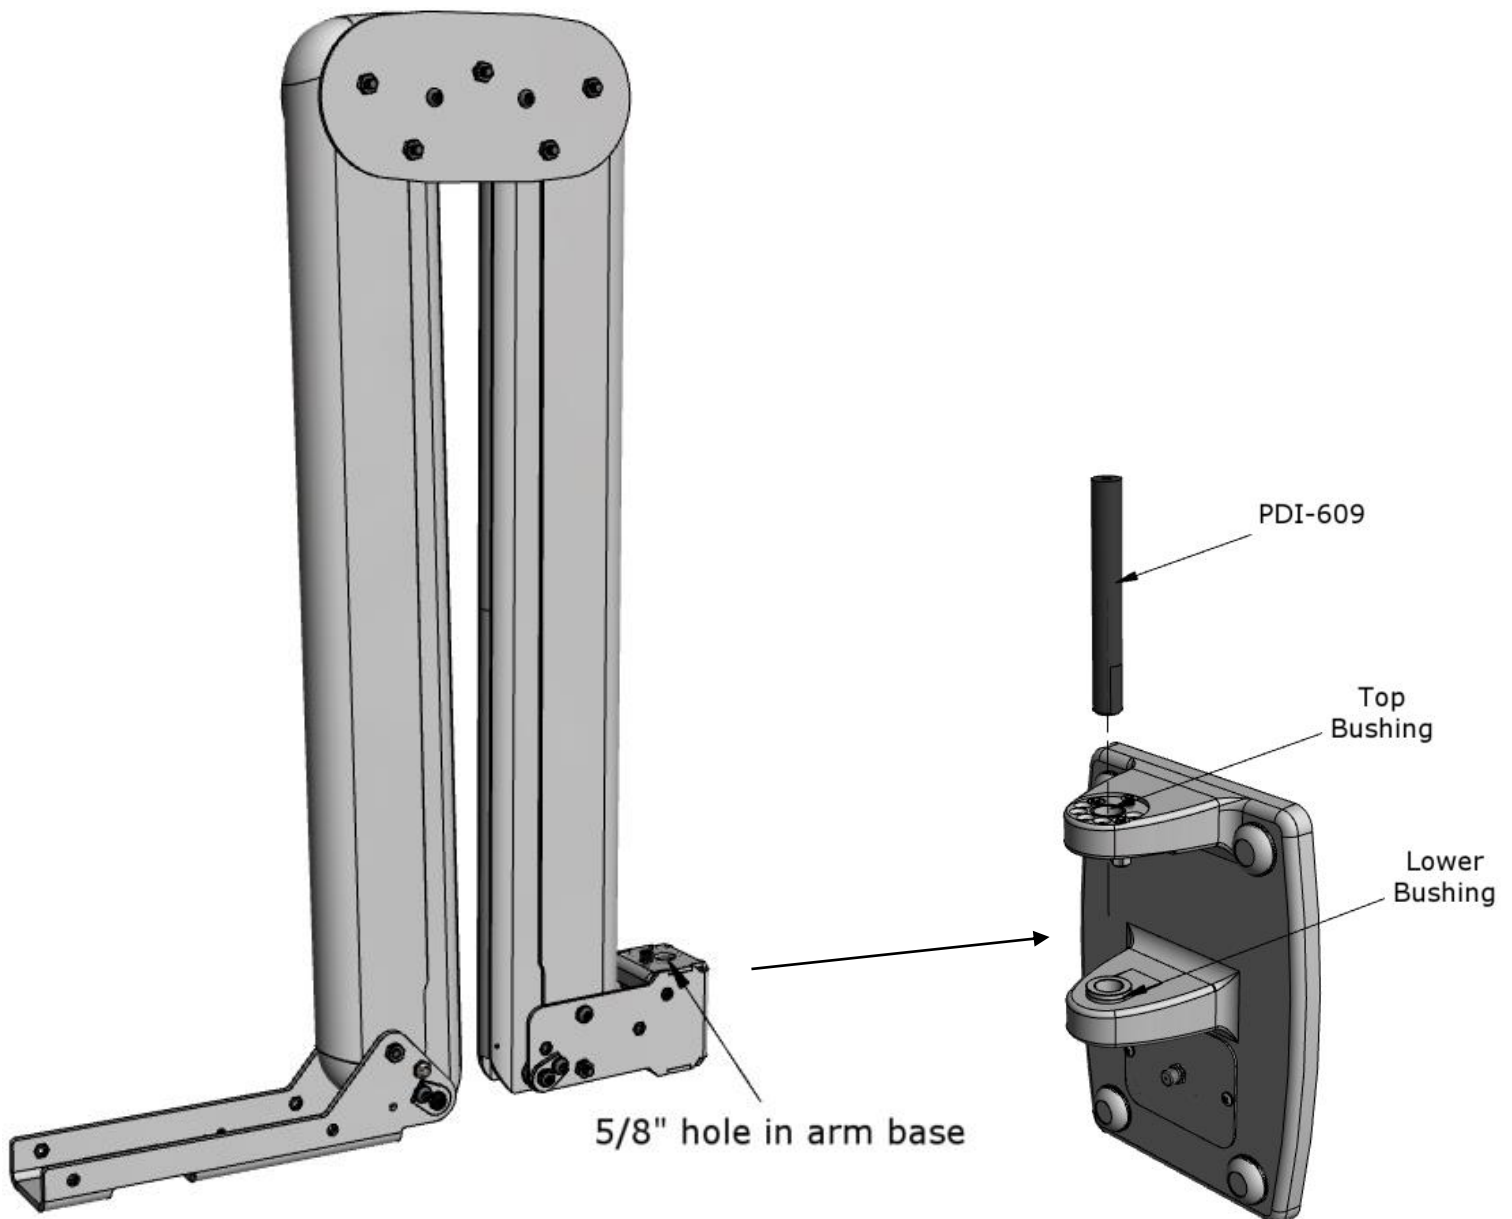

	MODEL NUMBER: AA1000 Series Arm	Document Number: PD196-197R6
	Installation Instruction for PDI-AA1000 Series Arm	Page 4 of 7


Step 3:

Make sure that the base pin is not sticking above the flat seat surface for the PD216-006 base pin cover.


IF THE BASE PIN IS NOT PROPERLY INSTALLED, IT CAN POSSIBLY LEAD TO FUTURE FAILURE OF THE ASSEMBLY!

Carefully rotate arm to verify there is not interference thru the horizontal range of travel.
 Proceed to the next step and install the **OPTIONAL** rotational stop screws, if they are desired.
 If the rotational stops are not needed, proceed to the step for installing the PD216-006 base pin cover.

Base pin must be below this flat surface to be properly installed

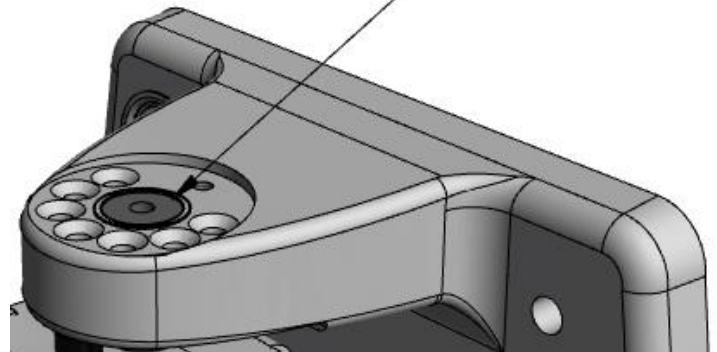

DETAIL A

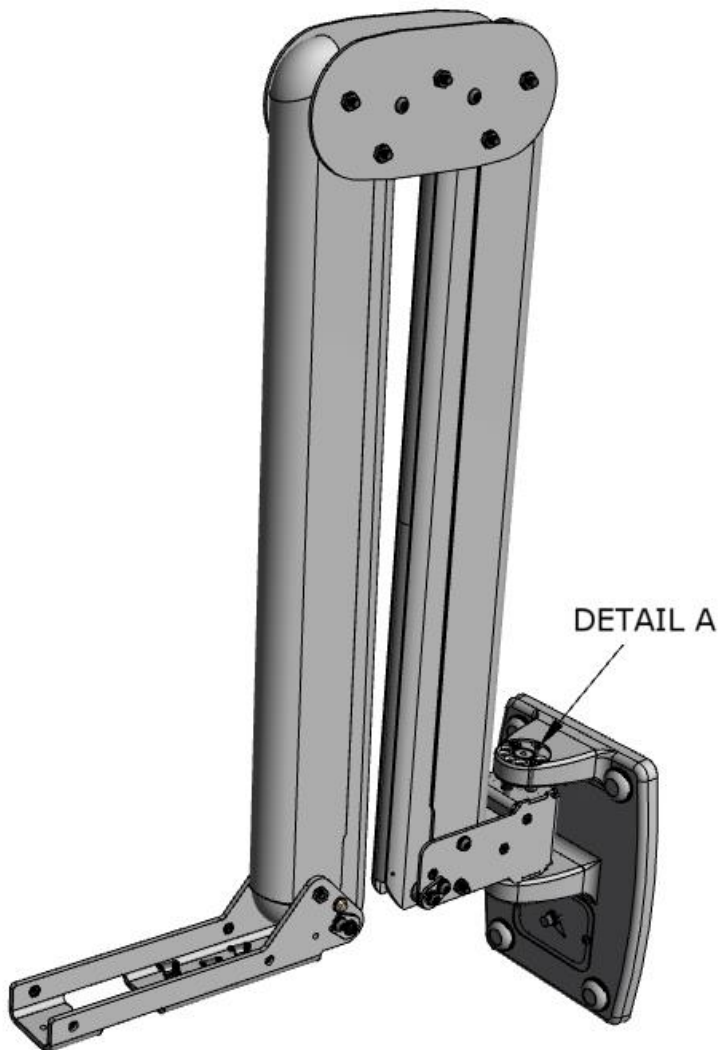

	MODEL NUMBER: AA1000 Series Arm	Document Number: PD196-197R6
	Installation Instruction for PDI-AA1000 Series Arm	Page 5 of 7

Step 4: Optional Feature:

Install the rotational stop screws only if they are desired.


Rotate the arm to the desired rotating limit position.

Locate the best hole position to install the PDIPFHMS1032100 screw and PDINILN1032 lock nut.

Install the screw and nut as pictured and securely tighten. Make sure that the base pin and screw head are not sticking above the flat seat surface for the PD216-006 base pin cover.


Carefully rotate arm against stop to verify travel limit is correct.

(2) PDIPFMS1032100 screws and (2) PDINILN1032 lock nuts are provided to allow a rotational stop for both left and right rotation of the arm.

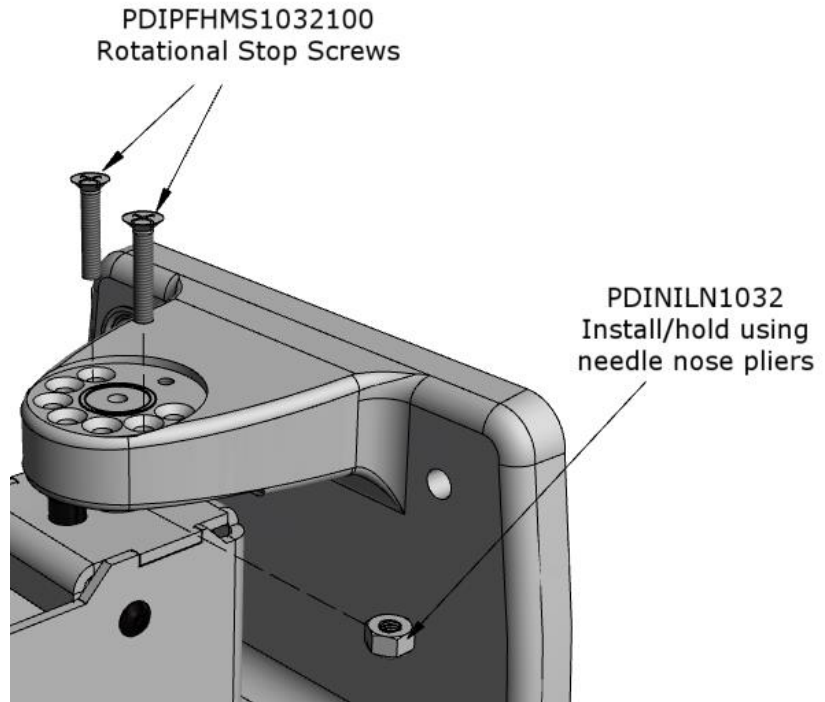

Step 5:

Re-install the PD216-006 base pin cover and secure with the PDIPFHMS103238 screw that was removed during STEP 1. Rotate the arm from side to side to verify that the arm moves freely.

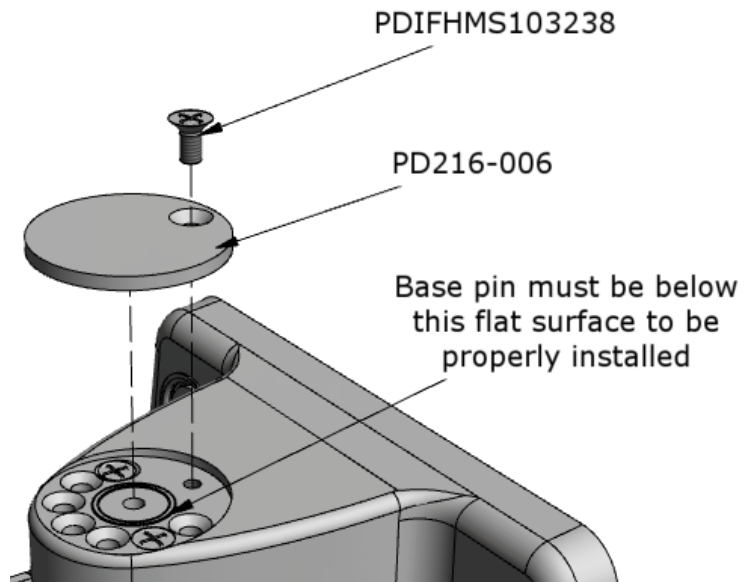


	MODEL NUMBER: AA1000 Series Arm	Document Number: PD196-197R6
	Installation Instruction for PDI-AA1000 Series Arm	Page 6 of 7

Step 6:

Attach the TV to the nose of the arm as pictured below, using a PD209-002 socket head cap screw and a PDISLW25 lock washer.

Make the coaxial cable connection per the installation documents supplied with the LCD TV. Verify the TV is correctly installed and functioning properly.

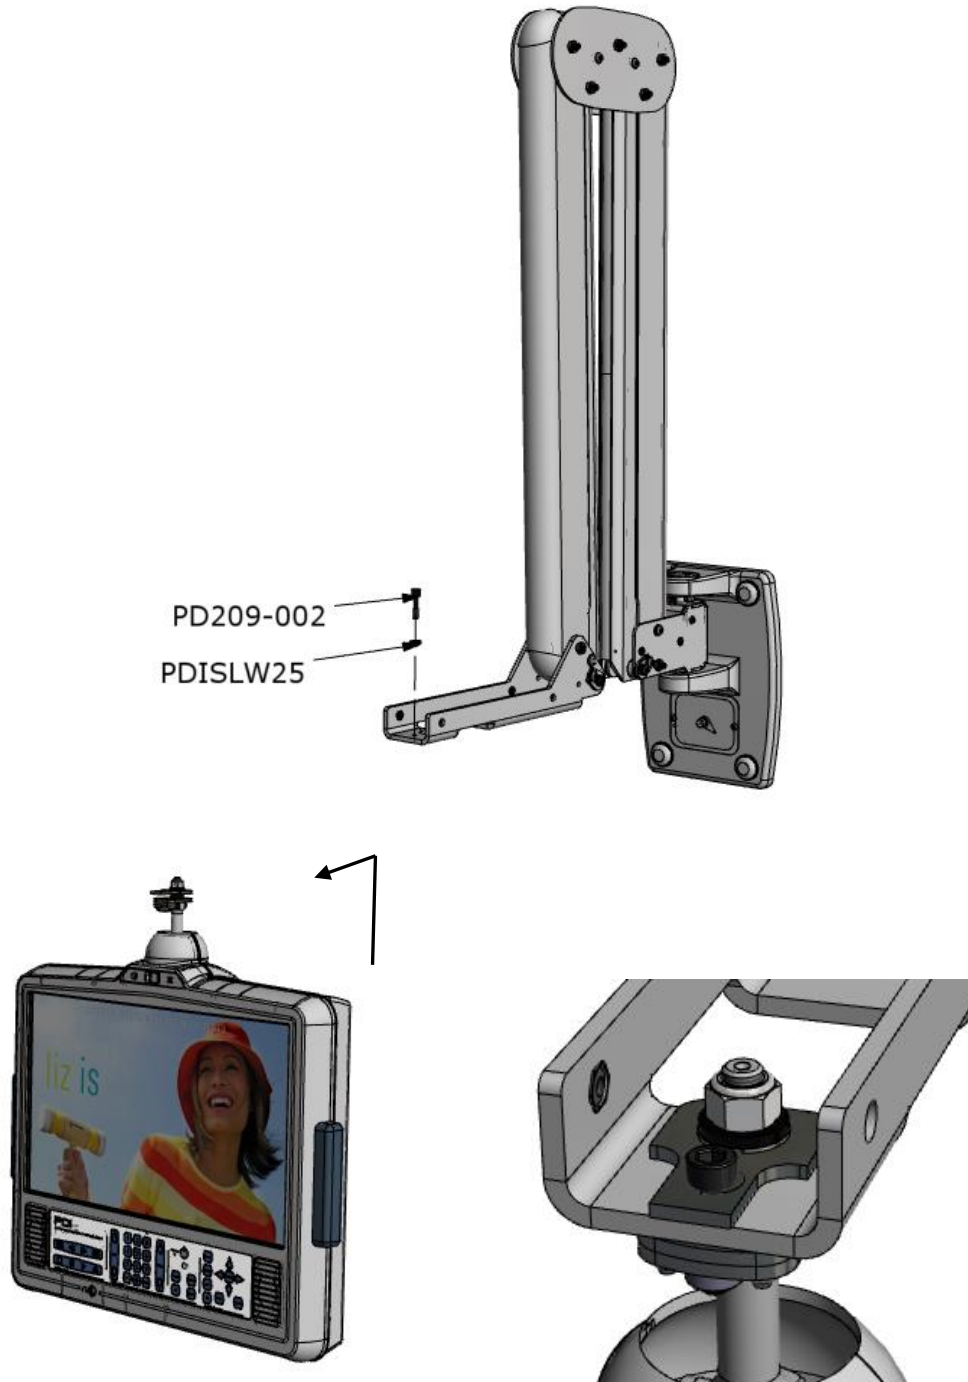

Step 7.

Install the cover kit according to the cover kit installation instructions, either PD196-199 or PD196-245.

	MODEL NUMBER: AA1000 Series Arm	Document Number: PD196-197R6
	Installation Instruction for PDI-AA1000 Series Arm	Page 7 of 7

ARM MAINTENANCE

Very little maintenance should be required for your PDI Arm to give years of trouble free service if the following lubrication and inspection procedures are followed.

1. **INSPECTION** - Occasionally check the base pin for any evidence of bending or distortion due to a patient using the ARM for assistance in getting in or out of bed or any other misuse. If the ARM is not mounted with the base pin absolutely vertical, it will have a tendency to drift and will not properly counter balance the television. Be certain that the wall the arm is mounted to is vertical.
2. **SPRING ADJUSTMENT** - The gas spring in this arm supports a specific weight range for the model construction. These springs are not "adjustable". The pivot points for some arm models can be moved to alter the weight capacity. Please contact the manufacturer for details. Otherwise the gas springs will have to be changed to alter the weight capacity of the arm.
3. **LUBRICATION** - At least once a year a drop of light machine oil should be put on each pivot point in the nose, elbow, and base. **DO NOT PUT OIL ON THE FRICTION DAMPER PADS!**
4. **REPLACEMENT OF COAX CABLE** - See cable replacement procedure in the full maintenance manual for your arm.
5. **TORQUE ADJUSTMENT OF PIVOT SCREWS** - All screws in the ARM are tightened securely to factory specified torque settings, and do not require specific checks with a torque wrench. **IF THE THREADS ARE STRIPPED IN THE NOSE, ELBOW, OR BASE, THAT PART NEEDS REPLACEMENT - DISCONTINUE USE IMMEDIATELY.**

