

INTRODUCTION

The PD108-420 programming remote provides IR control and setup of PDI's smart television models. It will operate any PDI TV regardless of the TV's Bed A/B/C/D setting. Because this remote has the SETUP button to gain full access to the TV's menus, it should not be given to patients. PDI offers other remotes designed for patient use.

ARROW KEYS

Newer model TVs (after 2018) may not respond to the arrow keys. If that happens, use the following key mapping.

UPDATE to move right

MODE to move left

INDEX to move up

MIX to move down

PDI offers an overlay for the PD108-420 remote that indicates the key mapping used by newer model TVs. The overlay part number is PD227-298.

For newer TVs PDI recommends using the PD108-520 remote which contains separate arrow, volume and channel keys.

Troubleshooting

- Install two high-quality 1.5V "AAA" alkaline batteries. Don't mix old batteries with new batteries.
- Remove batteries when you won't use the remote for a long time. Liquid leakage from old batteries may cause remote failure.
- Make sure there are no objects between the remote control and the TV's sensor that might block the signal.
- Don't place the remote control near a heater or in a damp place. Strong impact to the remote control may cause operational failure.
- Signal from the remote control may be disturbed by sun light or other bright lights. In this case, darken the room or move the TV.



PD227-298
overlay

1. POWER button
Turns the TV on or off
2. MUTE button
Turns the sound on or off
3. SETUP button
Access programming menus
4. TV/AV button
Selects enabled external inputs or TV
5. CH LIST button
Display list of channels programmed into TV
6. TV/FM button
Switch between TV and FM Radio sources
7. SLEEP button
Sets the sleep timer
8. LAST button
Return to previously viewed channel
9. VOL ◀▶ buttons
Raises or lowers volume. Also used to navigate programming menus.
10. OK button
Confirms the current channel selection
11. CH ▲▼ buttons
Selects next channel. Also used to navigate programming menus.
12. ARC button
Changes the aspect ratio.
13. CC button
Cycles through Closed caption choices
14. PSM button
Adjust sound setting for content type
15. SAP button
Adjust audio mode
16. SSM button
Adjust sound setting for content type
17. Number buttons
Use to directly enter channels
18. DASH button
Use to enter second part of a digital channel
19. Teletext buttons
Navigates teletext displays.
Teletext is not actively used in the USA

