

INSTRUCTIONS FOR CR4-2 and CR4B-2

*Philips, LG, Samsung and *RCA TV Remote Control

Battery Installation

1



Looking at the keypad, slide the dark lens cover away from you (STEP 1) and lift the lid from the back (STEP 2).

2



Install 2 AAA batteries. Make sure the + and - symbols on the metal hinge of the battery compartment correspond with the + and - end of each battery.

3



With the keypad facing away from you, close the cover by gently pressing it down (STEP 1) and sliding it until it aligns with the front (keypad) of the device (STEP 2).

4

Test the remote by pressing the power button. The LED should light up, indicating the batteries are in correctly. If the LED fails to light up, the batteries are either incorrectly inserted or dead.

Important: The optional screw for the battery compartment is taped to the (blue) box's lid.

The Remote Is Now Ready To Operate ANY *Philips, LG, Samsung or *RCA TV

*RCA & *Philips Hospitality TVs

Philips TV Tips

Did you know your Philips TV can power on to a TV Channel or the Home Screen?

The following options may be helpful but are not required: Your TV's home screen serves as the central hub for many TV features. By default, the Philips TV powers ON to this screen, providing guests with easy access to popular streaming apps like NETFLIX and YouTube, as well as casting. However, if your property does not offer these smart features, you can adjust the "Switch On Settings" so that the TV turns ON and displays regular TV channels instead.

For more information on changing your TV's "Switch On Settings" contact your Philips Dealer or visit the FAQ page on cleanremote.com. Regardless of the setting you choose, launching TV, streaming, and casting options can be done from the home screen.

Note: For more direct access to your Philips TVs Input and Sleep functions set the remote to Philips only mode: Press and hold both the POWER button and the number 3 button for 5 seconds.

Important: To restore the remotes default setting: Press and hold both the POWER button and the number 0 button for 5 seconds.

PDI TV Instructions

A code is required for PDI brand TVs. To enter the code Press and hold both the POWER button and the corresponding bed number for 5 seconds then release the buttons to lock in the code.

PDI BED A = POWER + 4

PDI BED B = POWER + 5

PDI BED C = POWER + 6

PDI BED D = POWER + 7