



med**TAB**¹⁶

med**TAB**²²

med**TAB**

Arm-Mounted, Healthcare-grade
Interactive LED HDTV with Android™ OS

For model numbers medTAB-E
(medTAB16E, medTAB22E)



	MODEL:	medTAB ²² - medTAB ¹⁶	Document Number: PD196-448R4
	User Manual		Page 2 of 23

Table of Contents

IMPORTANT SAFETY INSTRUCTIONS.....	5
INTRODUCTION.....	6
CABLING AND WIRING REQUIREMENTS	6
Power Supply Requirements.....	6
Coax Cable Specifications.....	6
Category Cable Specifications	6
NETWORK REQUIREMENTS	6
INSTALLING AND REMOVING THE TELEVISION.....	7
QUICK START GUIDE & POPULAR SETTINGS.....	9
Initial Power On – Setup Wizard.....	9
Set Up Channels (RF).....	11
USB Cloning.....	11
Delete Channels from the Channel Map	11
Power On Channel	11
Speaker Enable/Disable.....	11
Enable/Disable Sources	11
Firmware Update – USB and OTA	11
Factory Reset/System Recovery.....	12
Change PIN/Passwords for Settings Menus.....	12
DEVICE MANAGEMENT AND ANDROID SETTINGS.....	13
IPTV SETTINGS	15
RF TELEVISION SETTINGS.....	15
Accessing TV Settings.....	15
Display Mode.....	15
Closed Captions.....	15
Multi-audio / SAP Audio	15
Channel Setup	16
Service Level.....	16
Configure Channels	16
Channel Sources (Auto Program).....	16
Channel Sequence	17
Power On Channel	17
Parental Controls.....	17
Channel Lock	17
CH Override/Auto Update.....	17
Auto Channel Alias.....	18
Clear Service Level.....	18



	MODEL: medTAB²² - medTAB¹⁶	Document Number: PD196-448R4
	User Manual	Page 3 of 23

Copy Service Level18

TV Settings.....19

Picture Settings19

Sound Settings20

Internal Speaker20

Minimum Volume.....20

Maximum Volume20

Power on Volume20

Language Setting21

Sources21

Features22

Auto Power On/Lock.....22

Channel to Other Sources.....22

Menu Timer22

System.....22

Standby Power.....22


Reset All TV Settings.....22



USB Cloning.....23

Security23

Limited Warranty23



	MODEL: medTAB ²² - medTAB ¹⁶	Document Number: PD196-448R4
	User Manual	Page 4 of 23

	This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.
	This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

	CAUTION	
RISK OF ELECTRIC SHOCK, DO NOT OPEN!		
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL		



Overhead Falling Hazard

WARNING: To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.

TV can pose a striking hazard when mounted at an elevated position. Use only PDi mounting brackets, support arms, and appropriate hardware to assure TV will not fall from the mounted position.



Rain and Moisture

WARNING: To avoid the hazards of fire or electrical shock, DO NOT expose this television to rain or moisture.




Oxygen Environment

WARNING: Do not use in any oxygen tent or oxygen chamber. Such use may cause a fire hazard.

Note to Cable TV Installer

This reminder is provided to call the cable TV system installer's attention to Article 820-40 of the National Electrical Code. The code provides guidelines for proper grounding and in particular specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical. Canadian installations shall be properly grounded in accordance with the Canadian Electrical Code, Part 1.

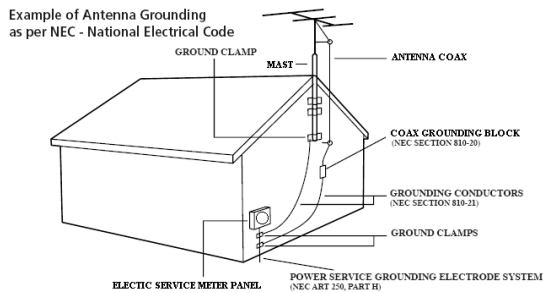

FCC

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Maintenance and Servicing

The TV does not require periodic maintenance other than cleaning. Never remove the back cover of the TV; this can expose you to high voltage and other hazards. If the TV does not operate properly, unplug it, and call an authorized service center or PDi.

Cleaning and Disinfection

Clean the exterior of this television by removing dust with a lint-free cloth. Spot test a new disinfectant by test cleaning a non-obvious small spot on the TV's back cabinet, keypad, and LCD panel. PDi recommends using a premoistened disinfectant cloth, like PD600-001 Super Sani-Cloth or similar, or spraying cleaner onto a dry cloth and then wiping the unit. Specific recommendations can be found at www.pdiarm.com. **CAUTION:** To avoid damage to the surface of the television, do not use abrasive or chemical cleaning agents.

Product Modification

Do not attempt to modify this product in any way without written authorization. Unauthorized modification could void the user's authority to operate this product.

Copyright, Trademarks

© 2024 PDi Communication Systems, Inc. All rights reserved. PDi®, medTV® and medTAB® are registered trademarks of PDi Communication Systems, Inc. Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. Product logos, brands and other trademarks displayed within PDi's products are the property of their respective trademark holders, who are not affiliated with, endorsing, or sponsoring PDi Communication Systems, Inc. or our products.

Underwriters Laboratories


This model Hospital Grade LED HDTV is a specialized TV and should be installed to National Electrical Code specifications. This device is safety tested and listed by the Underwriters Laboratories as a product suitable for use in healthcare facilities in both the United States and Canada.



Disclaimer

The author and publisher have used their best efforts in preparing this manual. PDi Communication Systems, Inc. makes no representation or warranties with respect to the accuracy or completeness of the contents of this manual and specifically disclaims any implied warranties or merchantability or fitness for any purpose and shall in no event be liable for any loss of profit or any other damages. The information contained herein is believed accurate, but is not warranted, and is subject to change without notice or obligation.





	MODEL: medTAB²² - medTAB¹⁶	Document Number: PD196-448R4
	User Manual	Page 5 of 23

IMPORTANT SAFETY INSTRUCTIONS

CAUTION: THIS INSTALLATION SHOULD BE MADE BY A QUALIFIED SERVICE PERSON AND SHOULD CONFORM TO ALL LOCAL CODES. READ AND FOLLOW THE SAFETY INSTRUCTIONS BEFORE ATTEMPTING THIS INSTALLATION.


1. Read Instructions - All the safety and operating instructions should be read before the product is operated.
2. Keep these Instructions - The safety and operating instructions should be retained for future reference.
3. Heed all Warnings - All warnings on the product and in the operating instructions should be adhered to.
4. Follow all Instructions - All warnings on the product and in the operating instructions should be followed.
5. Water and Moisture - Do not expose this product to rain or moisture. Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; near a swimming pool; and the like.
6. Cleaning - Please see specific recommendations under "Cleaning and Disinfection" on previous page.
7. Ventilation - Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided, or the manufacturer's instructions have been adhered to.
8. Heat - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.
9. Power-Cord Protection - Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the product.
10. Attachments - Only use attachments/accessories specified by the manufacturer.
11. Use only with cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
12. Lightning - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
13. Servicing - Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. Oxygen Environment - Do not use in an oxygen tent or oxygen chamber. Such use may cause a fire hazard.
15. To prevent injury, this apparatus must be securely attached to the wall in accordance with the installation instructions. TV's can pose a striking hazard when mounted at an elevated level.
16. Power Sources - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.

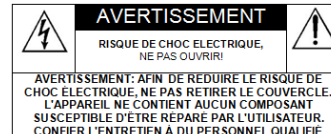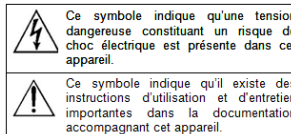

CONSIGNES DE SÉCURITÉ IMPORTANTES CETTE INSTALLATION DOIT ÊTRE EFFECTUÉE PAR UN TECHNICIEN QUALIFIÉ ET DOIT ÊTRE CONFORME À TOUS LES CODES LOCAUX. LIRE ET SUIVRE LES CONSIGNES DE SÉCURITÉ AVANT DE PROCÉDER À L'INSTALLATION.

1. Lire ces instructions.
2. Conserver ces instructions.
3. Respecter tous les avertissements.
4. Suivre toutes les instructions.
5. Ne pas utiliser cet appareil près de l'eau - par exemple près d'une baignoire, d'un lavabo, dans un sous-sol humide, ou près d'une piscine ou similaire.
6. Veuillez voir les recommandations sous "Nettoyage et Désinfection" à la Page précédente.
7. Ne pas obstruer les ouvertures de ventilation. Installer conformément aux instructions du fabricant. Les ouvertures ne doivent jamais être obstruées en plaçant le produit sur un lit, un canapé, un tapis ou toute autre surface similaire.
8. NE PAS installer près de sources de chaleur telles que radiateurs, registres de chaleur, poêles ou tout autre appareil (y compris les amplificateurs) qui produit de la chaleur.
9. NE PAS neutraliser le dispositif de sécurité de la fiche polarisée ou de terre. Ce produit est équipé d'une prise de terre à trois fils, une fiche ayant une troisième broche (mise à la terre). Cette fiche ne peut s'insérer que dans une prise de courant avec mise à la terre. Il s'agit d'une caractéristique de sécurité. Si vous êtes incapable d'insérer la fiche dans la prise, contacter votre électricien pour remplacer votre prise obsolète.
10. Protéger le cordon d'alimentation pour qu'il ne soit pas piétiné ni pincé, en particulier au niveau des fiches, des prises de courant et au point de sortie de l'appareil.
11. Accessoires - Utiliser uniquement les attaches/accessoires recommandés par le fabricant.
12. Utiliser uniquement avec un chariot, stand, trépied, support ou table recommandé par le fabricant ou vendu avec l'appareil. Lorsqu'un chariot est utilisé, faire attention lors du déplacement de l'ensemble chariot/appareil afin d'éviter des blessures en cas de basculement.
13. Débrancher cet appareil en cas d'orages ou lorsqu'il reste inutilisé pendant de longues périodes.
14. Confier toute réparation à un personnel de service qualifié. Des réparations sont nécessaires si l'appareil est endommagé d'une façon quelconque, par exemple : cordon ou prise d'alimentation endommagé, liquide renversé ou des objets sont tombés dans l'appareil, l'appareil a été exposé à la pluie ou à l'humidité, ne fonctionne pas normalement ou s'il est tombé.
15. Sources d'alimentation - Ce produit doit être utilisé uniquement à partir du type de source d'alimentation indiqué sur l'étiquette. Si vous n'êtes pas sûr sur le type d'alimentation de votre domicile, consultez le détaillant de votre produit ou la compagnie d'électricité locale. Pour les produits proposés de fonctionner par piles, ou autres sources d'alimentation, reportez-vous aux consignes d'utilisation.
16. Environnement d'oxygène - Ne pas utiliser sous une tente à oxygène ou chambre à oxygène. Une telle utilisation peut causer un risque d'incendie.



	MODEL:	Document Number:
	medTAB ²² - medTAB ¹⁶	PD196-448R4
User Manual		Page 6 of 23

INTRODUCTION

This smart touchscreen television is specifically designed for entertainment purposes for use in a hospital, nursing home, medical care center, or similar healthcare setting. The medTAB[®] complete, personal patient television system delivers a touchscreen experience that patients understand and enjoy as soon as they touch it. Built-in tv, games and relaxation apps, no internet required, no subscription fees, and no ADT integration necessary. When ready to connect to the internet via WiFi or Ethernet, patients enjoy access to a web browser and URL links direct to news, social or other online information. Contact your PDi representative to subscribe to GENiO™ which allows you to create a customized user interface with custom applications, such as patient education, movies, surveys, or facility services applications.

CABLING AND WIRING REQUIREMENTS

Power Supply Requirements

For models powered over coax, use only a power source from PDi suitable for use in a healthcare facility. The single coaxial cable out the top/back of the TV is used to supply low voltage 28VAC (or 24VDC) and RF signal to the television.

For models powered by ethernet (PoE) use only UL listed power sourcing equipment that offers 60W per port using all 4 pairs for power delivery. The industry uses several different identifiers to indicate the availability of 60W per port, including the following:

- IEEE 802.3bt type 3
- PoE++
- Ultra PoE (UPoE)
- Cisco Universal PoE+ (UPOE+)

Power sourcing equipment typically has a total power output less than needed to power all ports at the full 60W each. PDi TVs need 60W to meet peak demand, but on average use about half that. So a minimum recommended total power output is 30W x # of ports leading to a TV. As example, a 24 port PoE inserter must have at least a 24x30=720W total power output.

PDi recommends the following PoE midspan power inserters which have been tested and UL listed with PDi products:

- 1 port - Microchip Microsemi PD-9601G/AC
- 6 port - Microchip Microsemi PD-9506G/ACDC/M
- 12 port - Microchip Microsemi PD-9512GC/AC or PD-9612GC/AC
- 24 port - Microchip Microsemi PD-9524GC/AC or PD-9624GC/AC

On PDi devices powered over Ethernet, the ethernet cable on top/back of the TV is used to supply both power and data. Be sure power is not applied to the coaxial cable entering the TV.

Coax Cable Specifications

When using a central power supply, cable selection is crucial. Due to long coax cable runs encountered in hospital installations, coax cable employing a solid copper center conductor and copper shield is required. Cable run lengths MUST NOT exceed 150 feet. Required coaxial cable numbers include the following, which have been tested with coax-powered TVs.

- Alpha M4182 (replaced Alpha 9804C) (non-plenum)
- Belden 9248 (non-Plenum)
- West Penn 806 (non-Plenum)
- West Penn 25806 (Plenum)


Category Cable Specifications

PoE models are IEEE 802.3bt compatible. When using a PoE power inserter to apply power to ethernet, you may run up to 328 feet of CAT5e (or better).

NETWORK REQUIREMENTS

For ensuring the PDi device will operate correctly on the IP network, see PDi Document PD196-462, Network Requirements.





	MODEL: medTAB²² - medTAB¹⁶	Document Number: PD196-448R4
	User Manual	Page 7 of 23

INSTALLING AND REMOVING THE TELEVISION


Installing a top mounted TV on Suspension Arm

This television is designed to attach to a PDi suspension arm that is designed to support the weight of the TV. See Document PD196-428 Arm Mounted PDi TV Installation Instructions for additional details.

1. Remove the 3/4" socket head cap screw (PDISHCS252075) and the retaining washer (PD220-002) from the retainer plate of the TV. Discard the washer and place socket head cap screw to the side.
2. Slide the TV onto the end of the arm so that the retainer plate rests on top of the arm nose and the hole in the retainer plate aligns with the hole in the arm nose.
3. Secure the television into place with the 3/4" socket head cap screw from step 1.
4. Remove the safety pin from the safety brake pin hole in the suspension arm. Store the safety pin in the nose of the arm for easy access during TV removal.
5. Ensure power to the TV is disabled. Follow appropriate safety procedures to connect the cables and secure arm covers.

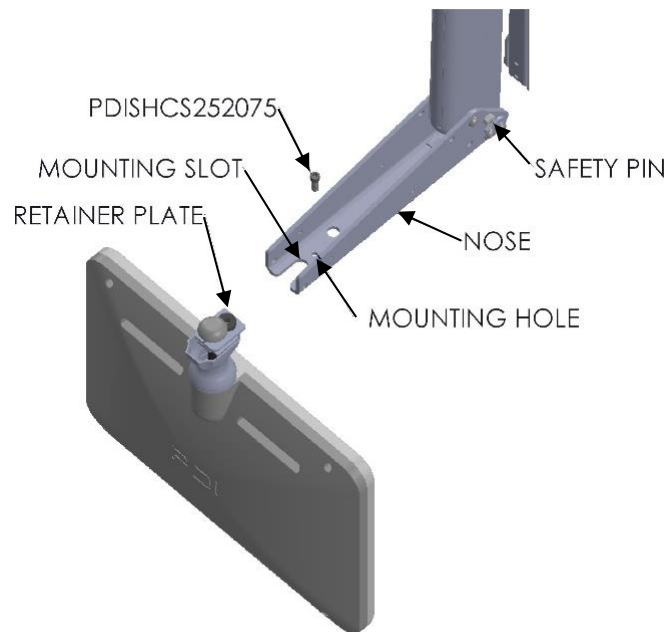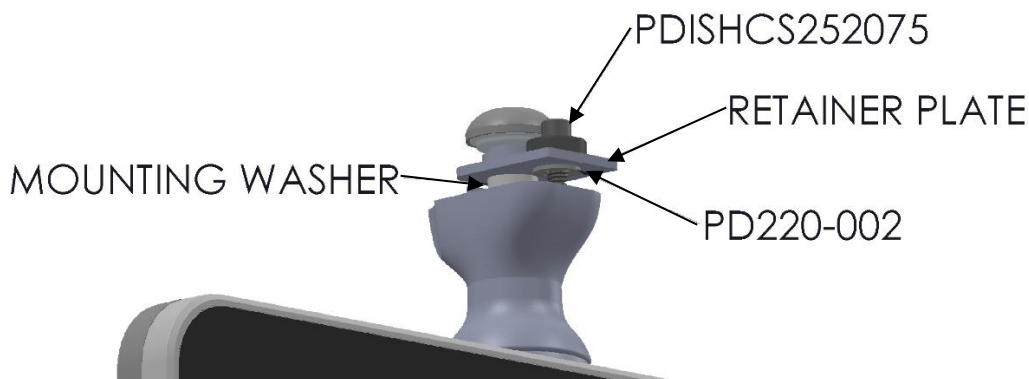

Arm Recoil Hazard: The safety brake pin must remain in the SAFETY BRAKE PIN HOLE whenever the television is removed from the arm or when the arm is removed from the wall bracket to prevent INJURY from the arm springing open.

	MODEL:	Document Number:
	medTAB²² - medTAB¹⁶	
User Manual		Page 8 of 23

Removing a top mounted TV from Suspension Arm


To remove the TV from the arm:

1. Follow the site safety procedures to disable power source to the TV. Remove plastic arm cover kits from the nose of the arm.
2. Find the safety pin stored in the nose of the arm. If unable to find the safety pin, contact PDi for a replacement before proceeding.
3. Install the safety pin in the safety brake pin hole.
4. Remove the 3/4" socket head cap screw, disconnect the cables, and slide the TV off the arm nose. Note: the 3/4" socket head cap screw is the **only** hardware that will need to be loosened or removed when removing a PDi TV from a PDi suspension arm.

Installing a rear mounted TV

The arm mounted TV's from PDi, that have been configured for rear mounting can be mounted on a 75mm x 75mm VESA pattern. The components to mount to a VESA mounting pattern are provided with the TV. Since there are many options for rear mounting, refer to Document PD196-428 Arm Mounted PDi TV Installation Instructions for general mounting instructions. Refer to the specific VESA mounting bracket for additional details.



	MODEL: medTAB²² - medTAB¹⁶	Document Number: PD196-448R4
	User Manual	Page 9 of 23

QUICK START GUIDE & POPULAR SETTINGS

Initial Power On – Setup Wizard

Upon initial power up, you will be walked through a setup wizard. If the Setup Wizard on your device does not match the images in this document, please update the device firmware.

Clone Device



If you have already configured another device and created a USB clone file, insert the USB and select “Restore from USB.” Otherwise, select Skip.

Wi-Fi Selection




If you will be using Wi-Fi for connectivity, select “Select WI-FI.” **Guest networks with captive portal (that require the acceptance of terms and conditions before use) should NOT be used.**

If you will be using hard wired internet, simply connect the ethernet cable to the jack in the nose of the arm and connect the ethernet cable at the base of the arm to a live ethernet jack.

GENiO Project ID



	MODEL: medTAB²² - medTAB¹⁶	Document Number: PD196-448R4
	User Manual	Page 10 of 23

GENiO SUBSCRIBER: If you have subscribed to GENiO and been assigned a project ID, enter your GENiO project ID by pressing the keyboard icon and entering your 5 digit project ID and OK. If a valid project ID has been entered, a message will appear with the project name. Press the OK button to proceed.

(optional) Location Setup. Enter the location of the device by pressing the keyboard icon. This will populate into GENiO to make the device easier to locate and manage within GENiO.

Press the OK button to finish. Device will reboot.

NON-GENiO SUBSCRIBER: If you are not a GENiO subscriber, simply press the OK button.

Home Configuration

(this menu only appears for non-GENiO users)



Select TV, Games, Relaxation which doesn't require any internet connectivity or select TV, Games, Relaxation, Education, Internet, News. Press the OK button.

TV Signal

(this menu only appears for non-GENiO users)




Select type of TV signal in use.

Complete Configuration



Finish set up by pressing OK



	MODEL: medTAB²² - medTAB¹⁶	Document Number: PD196-448R4
	User Manual	Page 11 of 23

POPULAR SETTINGS

Set Up Channels (RF)

Auto Program (or Channel Scan) the TV to load the TV channels to the TV's channel map.

1. Open the TV application. Touch anywhere on the screen to open the TV's touch controls.
2. Press Features -> TV Settings -> Enter PIN "45066" press blue check mark -> Channel Setup -> Channel Sources
3. Press PDi TvInput, change settings if needed.
4. Press Auto Scan button. Note: auto scan can take several minutes to complete
5. Press Done when Auto Scan is complete.

See RF TELEVISION SETTINGS section for more detailed information.

USB Cloning

Once you have a PDi TV configured the way you want, you can copy these setting configurations to other PDi TVs. USB Cloning copies most of the TV settings, including: channel scan/map, power on channel/volume, channel aliases, min/max volume, source settings, WiFi settings. NOTE: USB cloning does NOT copy GENiO project IDs.

On the TV you have set-up and configured that you want to copy the settings from:

1. Open the TV application. Touch anywhere on the screen to open the TV's touch controls.
2. Press Features -> TV Settings -> Enter PIN "45066" press blue check mark -> Menu -> System -> USB Cloning
3. Insert USB drive into USB-A port on front of device.
4. Press Save Setting to USB

On the TV you want to copy the settings to:

1. Open the TV application. Touch anywhere on the screen to open the TV's touch controls.
2. Press Features -> TV Settings -> Enter PIN "45066" press blue check mark -> Menu -> System -> USB Cloning
3. Insert USB drive from the step 3 above into USB-A port on front of device.
4. Press Restore Setting to TV. If no USB drive is found, this option will not be available.
5. From the Restore Setting option, select the file name that you saved your configuration.

Delete Channels from the Channel Map

1. Open the TV application. Touch anywhere on the screen to open the TV's touch controls.
2. Press Features -> TV Settings -> Enter PIN "45066" press blue check mark -> Channel Setup -> Configure Channels
3. Remove blue checkmarks next to the channel to be deleted for every service level applicable.

Power On Channel

1. Open the TV application. Touch anywhere on the screen to open the TV's touch controls.
2. Press Features -> TV Settings -> Enter PIN "45066" press blue check mark -> Channel Setup -> Power On Channel
3. Select the applicable Service Level (Free Basic, Premium)
4. Select Last Channel or the specific channel desired.

Speaker Enable/Disable

1. Open the TV application. Touch anywhere on the screen to open the TV's touch controls.
2. Press Features -> TV Settings -> Enter PIN "45066" press blue check mark -> Menu -> Sound -> Internal Speaker
3. Check marks next to a source indicate internal speakers are enabled for that source. Uncheck the boxes to disable speakers for a specific source.


Enable/Disable Sources

1. Open the TV application. Touch anywhere on the screen to open the TV's touch controls.
2. Press Features -> TV Settings -> Enter PIN "45066" press blue check mark -> Menu -> Sources
3. Select each source to change setting between Disable, Enable/APO (auto-power-on), Enable/NoAPO (auto-power-on)

Firmware Update – USB and OTA

The firmware is field upgradeable, but normally does not require this process and should be performed by the hospital technician. Once complete, the TV settings must be reprogrammed.



	MODEL: medTAB²² - medTAB¹⁶	Document Number: PD196-448R4
	User Manual	Page 12 of 23

OTA Update:

1. Open the Android settings menu with a long press on the medTAB logo in the top left corner of the device until the PIN entry screen appears.
2. Default PIN is "45066" then press OK
3. Press SETTINGS -> Device Preferences -> About -> System Update
4. If an update is available, press OK
5. Device will update and reboot.

USB Firmware Update:

A special data file is required from the PDi factory to complete this process by USB. Firmware files are written to the root directory of a blank USB Flash Drive. Disconnect power from the device. While in a no-power state, insert USB drive to front USB-A port. Then connect power. TV will update. Be sure to remove the USB drive when the update is complete. Once complete, the TV settings must be reprogrammed.

Factory Reset/System Recovery

1. Open the Android settings menu with a long press on the medTAB logo in the top left corner of the device until the PIN entry screen appears.
2. Default PIN is "45066" then press OK
3. Press SETTINGS -> Device Preferences
4. Scroll down and press Factory Menu -> System All Reset -> OK
5. Device will reboot.


Change PIN/Passwords for Settings Menus

The default PIN/Password for all menus is 45066. The PIN to the Android Settings accessed through the Main Menu logo long-press cannot be changed.

It is possible to change the default PIN for the Television Settings. From the TV touchscreen menu -> Features -> TV Settings -> Enter PIN "45066". Press blue check mark, then Menu -> System -> Security -> Change menu password. Note: If the PIN is changed and forgotten, it cannot be recovered. Factory reset will be required.

It is possible to change the default PIN for the IPTV App Settings. From the IPTV touchscreen menu -> Features -> App Settings -> Enter PIN "45066". Press enter, then System -> Change app settings passcode. Note: If the PIN is changed and forgotten, it cannot be recovered. Factory reset will be required.




	MODEL:	medTAB ²² - medTAB ¹⁶	Document Number: PD196-448R4
	User Manual		Page 13 of 23

DEVICE MANAGEMENT AND ANDROID SETTINGS

To enter device settings:

1. At the home screen, open the Android settings menu with a long press on the medTAB logo in the top left corner of the Main Menu until the PIN entry screen appears.
2. PIN is "45066" then press OK. This PIN cannot be changed.

From this screen you can see information about your device, edit Genio information, access Android settings, and access the setup wizard.

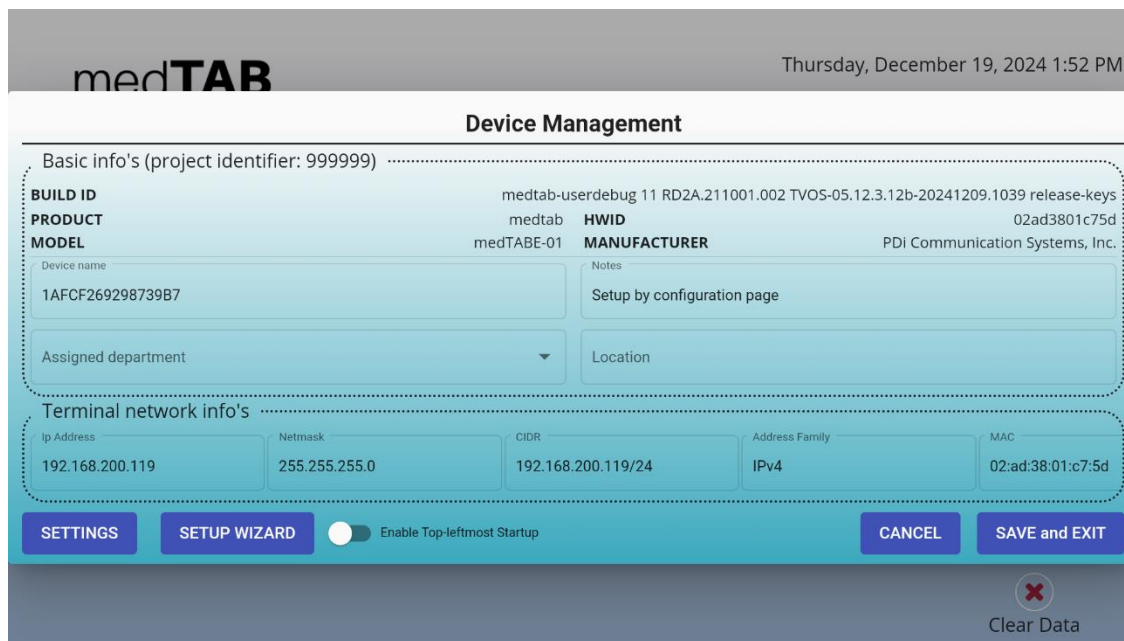

The screenshot shows the 'Device Management' screen for a medTAB device. At the top, the medTAB logo is on the left and the date/time 'Thursday, December 19, 2024 1:52 PM' is on the right. The main title is 'Device Management'. Below this, there's a section for 'Basic info's (project identifier: 999999)'. This section contains several fields: BUILD ID (medtab-userdebug 11 RD2A.211001.002 TVOS-05.12.3.12b-20241209.1039 release-keys), PRODUCT (medtab), MODEL (medTABE-01), HWID (02ad3801c75d), MANUFACTURER (PDI Communication Systems, Inc.), Device name (1AFCF269298739B7), and Notes (Setup by configuration page). There are also fields for Assigned department and Location. Below this is the 'Terminal network info's' section, which displays Ip Address (192.168.200.119), Netmask (255.255.255.0), CIDR (192.168.200.119/24), Address Family (IPv4), and MAC (02:ad:38:01:c7:5d). At the bottom, there are buttons for SETTINGS, SETUP WIZARD, a toggle for 'Enable Top-leftmost Startup', CANCEL, and SAVE and EXIT. A 'Clear Data' button with a red X icon is also present.

Device name will show in GENiO for this TV

Notes will show in Genio for this TV

Assigned department will set the GENiO department, if one or more are defined

Location will show in GENiO for this TV

Terminal network info section displays network details for the TV

Settings provides access to Android settings and information.

Network & Internet – connect your device to a wireless network or configure network settings

Applications – provides a list of installed applications

Device Preferences – (many of the Device Preference menus also accessible through the TV app TV Setup menu). The most useful options:

About – Navigate to this menu for access to the following:

- System Update – access over the Air (OTA) updates if a new update is available
- Factory Reset – return your device to factory settings
- Status – IP address, MAC address, up time clock
- Product Information – model number, OS version

Date & Time – Defaults to network time


Energy saver – Turn off display after 5 minutes – 24 hours. Default is 30 minutes.

Factory Menu – Factory reset TV settings (System Reset) or all device settings (System All Reset)

Restart – reboots the device

Remotes & accessories (wireless pairing/Bluetooth)




	MODEL: medTAB²² - medTAB¹⁶	Document Number: PD196-448R4
	User Manual	Page 14 of 23

Setup Wizard will launch the device setup wizard, allowing you to choose a different configuration or allowing you to register your device to a GENiO project. Select YES when prompted to reset device configuration. This procedure will not reset other device and app settings.

Enable Top-leftmost Startup if switched on, device will power on to whatever application is in the top left position. By default, this application is TV.



	MODEL: medTAB²² - medTAB¹⁶	Document Number: PD196-448R4
	User Manual	Page 15 of 23

IPTV SETTINGS


For information on IPTV setup and use, see PDi Document PD196-460, IPTV App User Guide.

RF TELEVISION SETTINGS

TV setup can be done using the touchscreen or a PDi programming remote. The PDi programming remote (Part Number PD108-520) must be ordered separately. The following instructions assume you have correctly mounted the TV and connected a coax cable that provides RF signal.

Accessing TV Settings

To set up your RF television channels or to make changes to the television settings, open the TV app on the Main Menu. With the remote, press TV SETUP or bring up the touchscreen menu by pressing anywhere on the screen and pressing Features-> TV Settings. Enter password 4 5 0 6 6 then touch the blue checkmark on the touchscreen or press "OK" on remote.

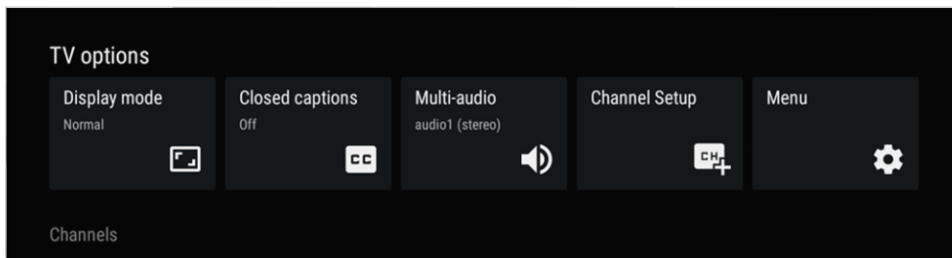

Display Mode


(Aspect Ratio) allows you to change the aspect ratio of the TV app. Note that this setting can also be accessed by device users without a password through the Features menu of the TV app.

Closed Captions


allows you to turn closed captions on and to change the font size and style of closed captions. Note that this setting can also be accessed by device users without a password through the main TV app navigation and through the Features menu of the TV app.

Multi-audio / SAP Audio

The Multi-audio setting allows you to select or manage different audio tracks or sources for the content you're watching. In general, this setting provides flexibility and control over the audio experience, allowing viewers to tailor it to their preferences and needs. SAP (Secondary Audio Program) is typically used for listening to audio in an alternate language. Note that this setting can also be accessed by device users without a password through the Features menu of the TV app

	MODEL:	medTAB ²² - medTAB ¹⁶	Document Number: PD196-448R4
	User Manual		Page 16 of 23

Channel Setup

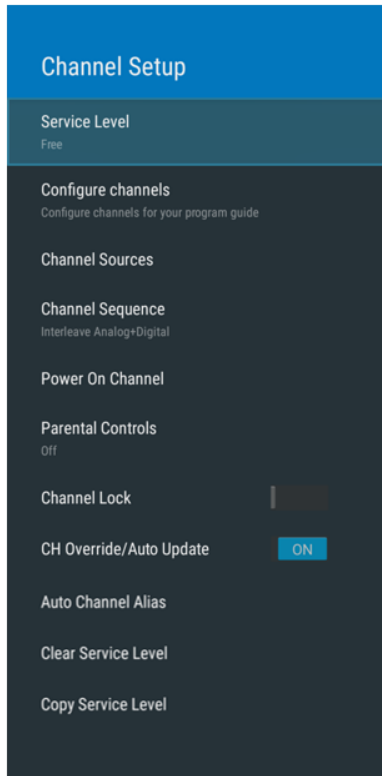

Accessing the Channel Setup menu

1. Open the TV app on the Main Menu.
2. With the remote, press TV SETUP or bring up the touchscreen menu by pressing anywhere on the screen and pressing Features -> TV Settings.
3. Enter PIN "45066" then touch the blue checkmark on the touchscreen or press "OK" on remote.
4. Select Channel Setup

Service Level

This TV offers three different programmable service levels: Free, Basic, and Premium. Only one service level is usable at a time on an individual TV.

Configure Channels


This setting allows you to assign channels to one or more service levels. **F** (Free) **B** (Basic) **P** (Premium). Use the touchscreen to select which service level each channel should be assigned to. You will want to go through Auto Program prior to using this setting.

Channel Sources (Auto Program)

This setting is where you'll find the Auto Program (or Channel Scan) feature. During Auto Program, the TV scans each available channel for activity. Channels that display activity are memorized into the selected Service Level.

From the Channel Setup menu:

1. Select Channel sources to open the "Set up your sources" menu
2. Select PDiTVInput

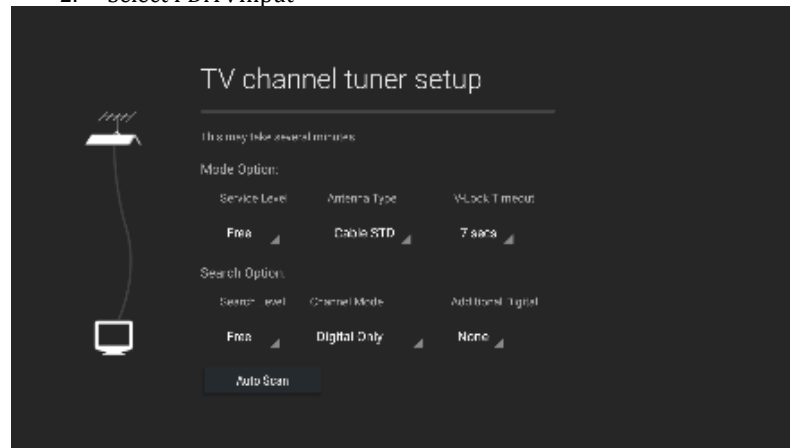


Mode Option Settings

3. Set the Service Level you are programming (**Free, Basic, Premium**).
4. Set the Antenna Type (**Air or Cable**) depending upon the healthcare facility's signal style.
5. Leave V-Lock Timeout at **7 secs**. The V-Lock Timeout feature is provided to adjust the dwell time at each frequency as the auto-program scans for a valid signal.


Search Option Settings

6. Set the Search Level you are programming (**Free, Basic, Premium**). Ensure it matches the Service Level Mode setting in step 3.
7. Set the Channel Mode (**Analog Only, Digital Only, or Analog and Digital**) depending upon the healthcare facility's signal style.



	MODEL: medTAB²² - medTAB¹⁶	Document Number: PD196-448R4
	User Manual	Page 17 of 23

8. Set Additional Digital (**None or Air**) depending on the healthcare facility's signal style.
9. Press Auto Scan button. Note: auto scan can take several minutes to complete
10. Press Done when Auto Scan is complete

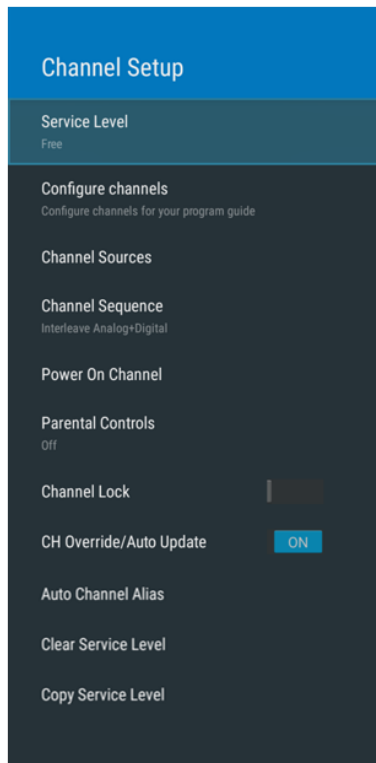

Channel Sequence

If the facility has both analog and digital channels, this setting allows you to set the order in which they will appear in the channel line up, All Analog then Digital or Interleave Analog+Digital. Select based on facility preference. The default setting is All Analog then Digital.

Power On Channel

Set the TV to power on to a specific channel or to the Last Channel that was on when the TV turned off. Power On Channel can be set for each Service Level so long as the Service Level has channels. This feature is useful for hospitals that have a Welcome Channel and wish to have it displayed upon initial use of the TV. The patient can then tune to any other available channel.

From the Channel Setup menu:

1. Select Power On Channel
2. Select the Service Level (Free Basic, Premium)
3. Select Last Channel or the specific channel desired. Note, if the selected Service Level shows only Last Channel and no list of channels, that Service Level has no channels assigned to it. Add channels to the Service Level through the Configure Channels menu.

Parental Controls

Parental controls provide the ability to block channels or to block programs based on their rating. The default setting is off. To enable parental controls,

From the Channel Setup menu:

1. Select Parental Controls
2. Create a PIN and confirm your PIN. The PIN can be changed but the prior PIN is required to change the PIN. If you forget your PIN, you will need to clear TV Settings by going to TV App -> TV Settings -> Enter Password (4-5-0-6-6) -> Menu -> System -> Reset All TV Settings. TV will reboot. This will clear all TV Settings.
3. Turn Parent Controls ON with the toggle switch.
4. Channels Blocked menu lets you block entire channels from the TV.
5. Program Restrictions by Rating. Choose the desired Rating System to reduce the number of available options in step 6. Canada, Canada (French), United States, United States (Fim ratings) populate by default. Additional rating systems are available by pressing "See all rating systems"
6. Block Ratings menu lets block programs by rating. This can be set based on general settings (High, Medium, Low) or can be set manually through the Custom menu.


Channel Lock

This feature allows you to fix the TV to a specific channel. For example, this feature may be used if the TV is in a common area. With the TV tuned to the desired channel, navigate to the Channel Setup menu. Go to Channel Lock menu item and toggle Channel Lock switch to ON. To remove the channel lock, toggle channel lock switch again.

CH Override/Auto Update

CH Override allows any channel to be entered using the TV's or the remote's number pad, even if the channel is not memorized in the current Service Level. Toggle the switch to turn Channel Override On/Off. Note: the channel must have enough signal strength to be detected by the TV firmware to be added to the existing channel map.



	MODEL: medTAB²² - medTAB¹⁶	Document Number: PD196-448R4
	User Manual	Page 18 of 23

Auto Channel Alias

This setting automatically assigns a sequential channel number to the channels in the list. Select the appropriate option: Fill Analog Gaps with Digital Channels, Renumber Only Enabled Channels, Renumber All Channels, or Remove All Aliases. You will be asked to confirm your selection.


Clear Service Level

This setting clears the channel map for the specified service.


Copy Service Level

This setting copies the channel map from one service level to another service level (ie Free copied to Basic).



	MODEL: medTAB²² - medTAB¹⁶	Document Number: PD196-448R4
	User Manual	Page 19 of 23


TV Settings

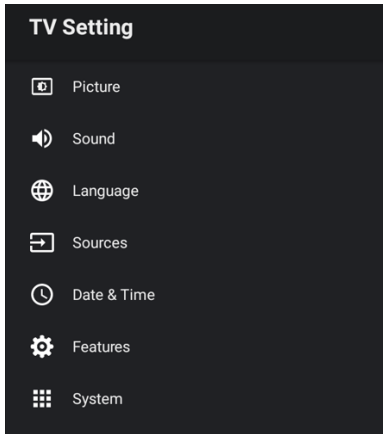

Accessing the TV Settings menu

1. Open the TV app on the Main Menu.
2. With the remote, press TV SETUP or bring up the touchscreen menu by pressing anywhere on the screen and pressing Features -> TV Settings.
3. Enter PIN "45066" then touch the blue checkmark on the touchscreen or press "OK" on remote.

Select Menu

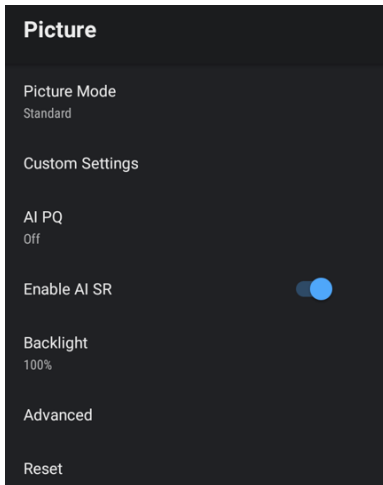

Picture Settings

Picture Mode

The default is standard picture mode. Or you can change to Vivid, Cinema, Sports, Monitor, Game, or User. User mode allows you to manually adjust picture settings through the custom settings menu where you can manually adjust brightness, contrast, saturation, sharpness, and Hue. All are defaulted to 50%.

AI PQ (Artificial intelligence picture quality)

default is off

AI SR (Artificial intelligence super resolution)

default is on


Backlight


Changes the brightness of the display 0-100%. Default is 100%

Advanced

provides access to additional settings such as color temperature, DNR, DeBlock etc. It is rare that these settings will need to be adjusted.



	MODEL:	medTAB ²² - medTAB ¹⁶	Document Number: PD196-448R4
	User Manual		Page 20 of 23

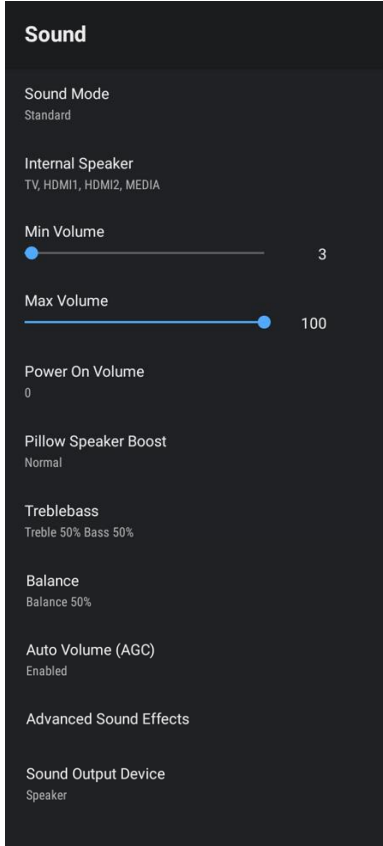

Sound Settings

From the Sound menu, you can customize the speaker settings. This allows you to set max volume levels, disable internal speakers, etc. These settings apply to all applications on the device.

Sound Mode

The default is standard sound mode, or you can change to Music, News, Movie, Game, User. User mode allows you to manually adjust five band settings. All are defaulted to 50%.

Internal Speaker

The TV's internal speakers can be enabled or disabled requiring the use of a headphone for private listening. This option is commonly used in dialysis clinics and multiple occupancy rooms. Speakers can be enabled/disabled by individual TV source (TV, HDMI1, HDMI2, MEDIA). Note that MEDIA settings apply to all non-TV applications on the device. Check or uncheck the boxes next to the sources/inputs for which you want the internal speakers disabled. To ensure the speakers are always disabled, uncheck all boxes.

Minimum Volume

Sets the minimum volume level the unit can reach. Setting this to any value other than 0 guarantees that some level of sound will always be heard when the TV is operating. Touch the sliding scale to adjust volume from 0 to 100.

Maximum Volume

Sets the maximum volume level the TV can reach. Touch the sliding scale to adjust volume from 0 to 100.

Power on Volume

Sets the initial volume for the TV upon powering on. Options include "Use last volume" or "Set volume" to manually set the power on volume level. Once the TV is on, the volume can be set to any allowable level. **NOTE:** If Power on Volume is set to LAST, and physical power is removed (ie. a power outage), the TV will power on with a volume of zero.

Pillow Speaker Boost

Defaulted to Normal, can be changed to Disabled or Strong


Treblebass


Adjust Treble and Bass. Both default to 50%

Balance

Adjust speaker volume left to right.




	MODEL: medTAB²² - medTAB¹⁶	Document Number: PD196-448R4
	User Manual	Page 21 of 23

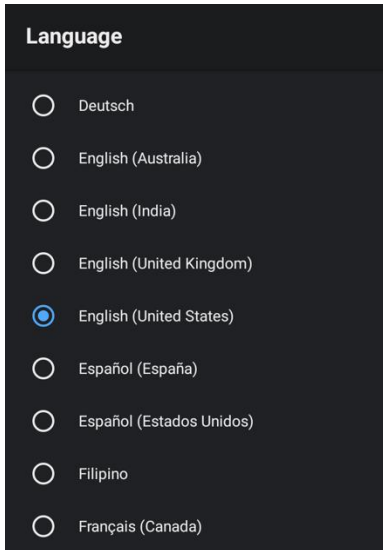

Language Setting

Language settings apply to the system menus only. More than 40 languages available

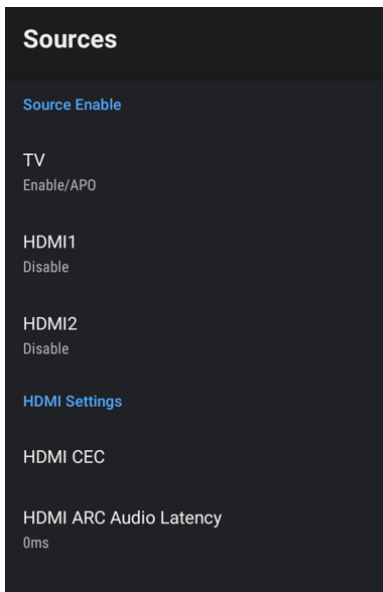

Sources

Source Enable


If you ordered your TV with optional HDMI inputs, this menu is where you will enable the source. Each source can be set to Disable, Enable/APO (auto-power-on), Enable/No APO (auto-power-on).


NOTE: Please disable all TV sources that are not in use. A TV that is switched to a non-connected source generates nuisance hospital maintenance calls of TV Not Working, when in fact the TV does work, but has been set to an inactive source.

HDMI CEC and ARC settings

Enable and adjust HDMI CEC settings and ARC control through the HDMI CEC and HDMI ARC Audio Latency menus under the Sources Menu



	MODEL: medTAB²² - medTAB¹⁶	Document Number: PD196-448R4
	User Manual	Page 22 of 23

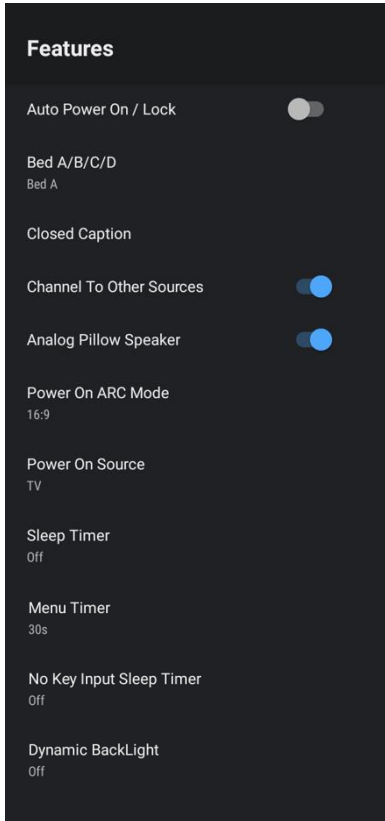

Features

Auto Power On/Lock

If enabled, user cannot turn the device off. This feature is useful for controlling the TV from a wall switch or preventing the TV from being turned off by the TV power button or the remote control.

Bed A/B/C/D

The TV offers selectable codes Bed A, Bed B, Bed C, and Bed D for independent control of a single television in a multi-television room.

Channel to Other Sources


When enabled, user will be able to access HDMI sources through the TV channel line up

Sleep Timer

TV will auto power off after the set amount of time, 10 minutes to 8 hours. Note that this setting can also be accessed by device users without a password through the main TV app navigation and through the Features menu of the TV app.

Menu Timer

Set-up menus will automatically close after the defined amount of time. This feature can be disabled or the default 30 seconds can be changed from 15 seconds to 240 seconds

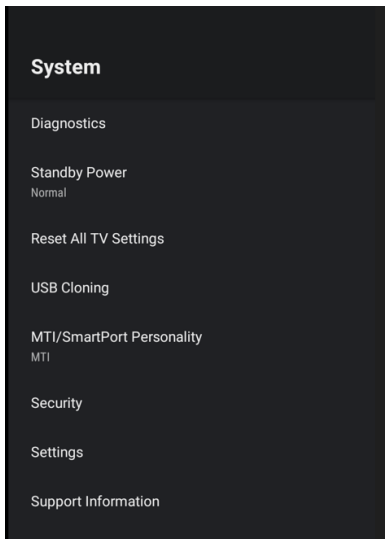

System

Diagnostics

This menu provides information on the TV's internal operation including power on cause, CCI version, TV version, and hours on. The Diagnostics items are read-only and cannot be changed.

Field On Hours: Cumulative time TV is actually on.
Field Powered Hours: Cumulative time TV is powered.


Standby Power

Normal or Low

Reset All TV Settings

Clears TV settings to factory settings. For full device reset, go to Android Settings -> Device Preferences -> Factory Menu -> System All Reset



	MODEL: medTAB²² - medTAB¹⁶	Document Number: PD196-448R4
	User Manual	Page 23 of 23

System
Diagnostics
Standby Power Normal
Reset All TV Settings
USB Cloning
MTI/SmartPort Personality MTI
Security
Settings
Support Information

USB Cloning

Once you have a PDi TV configured the way you want, you can copy these settings to other PDi TVs. USB Cloning copies most of the TV settings, including: channel scan/map, power on channel/volume, channel aliases, min/max volume, source settings, WiFi settings.

NOTE: USB cloning does NOT copy GENiO project IDs.

On the TV you have set-up and configured that you want to copy the settings from:

1. Open the TV application. Touch anywhere on the screen to open the TV's touch controls.
2. Press Features -> TV Settings -> Menu -> System -> USB Cloning
3. Insert USB drive into USB-A port on front of device
4. Press Save Setting to USB

On the TV you want to copy the settings to:

1. Open the TV application. Touch anywhere on the screen to open the TV's touch controls.
2. Press Features -> TV Settings -> Menu -> System -> USB Cloning
3. Insert USB drive from the step 3 above into USB-A port on front of device
4. Press Restore Setting to TV. If no compatible clone file is found, this option will not be available.

MTI/SmartPort Personality

You can toggle between MTI and SmartPort setting here. These settings support third-party systems. Please contact your vendor for support

Security

The default PIN/Password for all menus is 45066. It is possible to change the default PIN for the Television Settings. From the TV touchscreen menu -> Features -> TV Settings -> Menu -> System -> Security -> Change menu password. Note: If the PIN is changed and forgotten, it cannot be recovered. Factory reset will be required.

The PIN to the Android Settings accessed through the Main Menu logo long-press cannot be changed and is 45066.

Settings

access to the Android Settings menu

Support Information

show product support contact information

Limited Warranty

PDi Communication Systems Inc., ("PDi") standard warranty information is found at pdiam.com. For information regarding authorized servicing and all other information pertaining to this warranty, please contact PDi COMMUNICATION SYSTEMS, INC. at 40 Greenwood Ln, Springboro, Ohio 45066 or phone 800-628-9870 and ask for the PDi ProServices team

